

DEFINITIONS



- **Everything** – rehabilitate all main sewers, manholes, service connections, and service lines; and remove all identified building and inflow sources/defects.
- **Typical Comprehensive** – rehabilitate the main sewers and manholes that are contributing significant amounts of I/I; and remove all identified building and inflow sources/defects.
- **Typical Comprehensive + LL** – rehabilitate main sewers and manholes that are contributing significant amounts of I/I; remove all identified building and inflow sources/defects; and rehabilitate all service connections and lower laterals (lower service lines).
- **Control** – no rehabilitation work will occur, flow monitoring only

Typical Comprehensive

Control

Everything

78th Ter Typical Comprehensive + LL

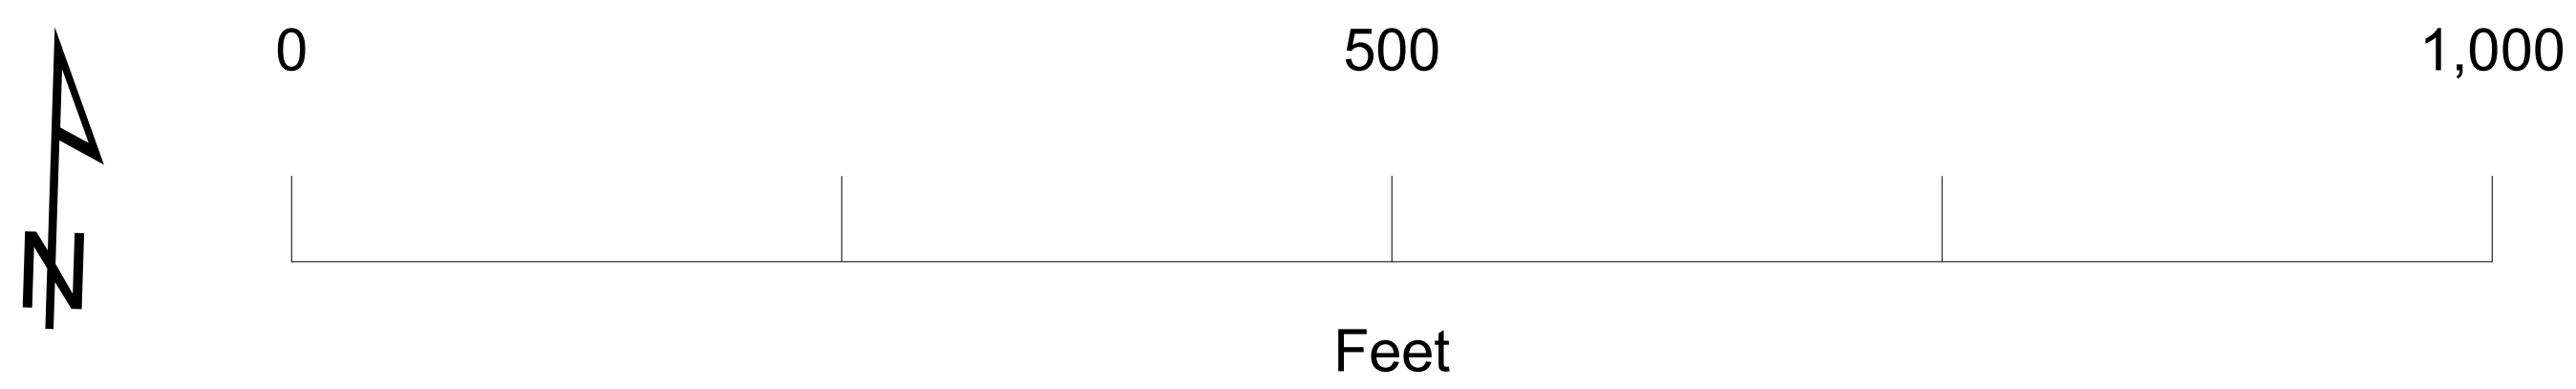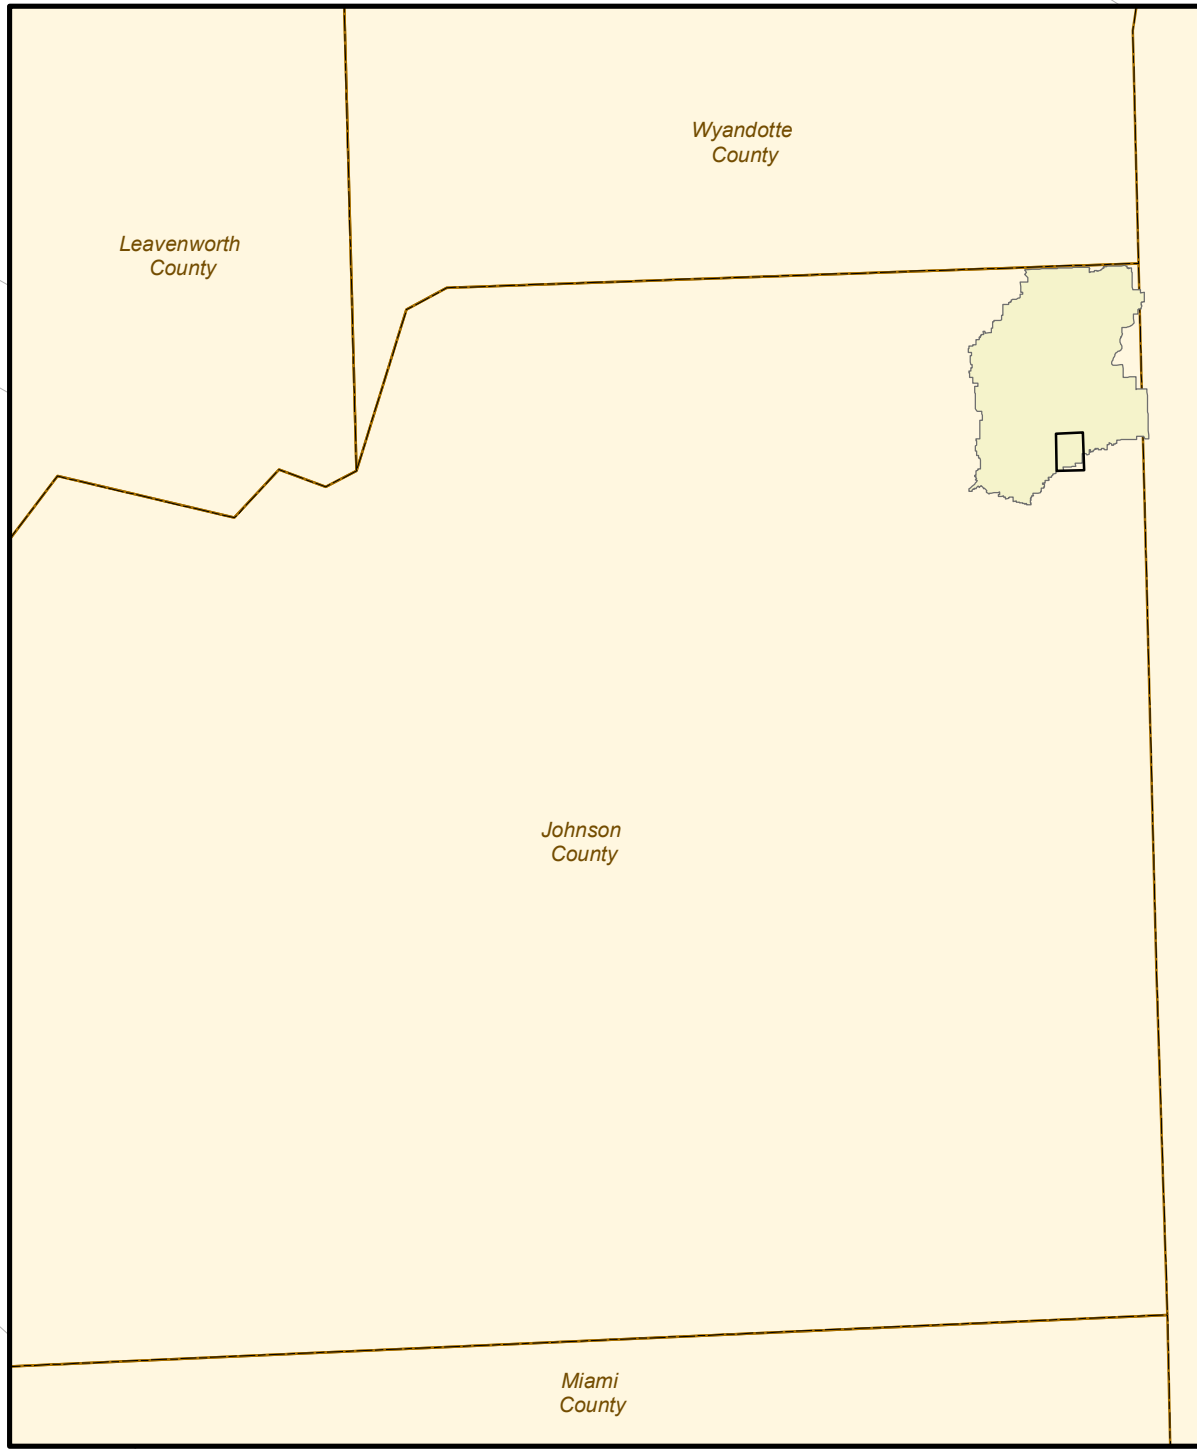

LEGEND

- MTM1 Strategies**
- MTM1 Pilot Area Manholes
 - MTM1 Pilot Area Pipe
- Strategy**
- Control
 - Everything
 - Typical Comprehensive
 - Typical Comprehensive + LL

FIGURE MTM1-1

Rehabilitation Strategy
 Mission Township Main 1 I/I Pilot Area
 Nelson WWTP Complex
 Johnson County Wastewater, Kansas

